


How to install ReWaRD 2.5

1. Place the Geocentrix Software CD in your CD-ROM drive. The Browser (right) should automatically appear (if not, run **SETUP.EXE** from the CD's root folder).
2. Click on the text "**Click here to install ReWaRD**" or the arrow  alongside it to run the ReWaRD Setup program.
3. When asked "Do you want to run or save this file?" click **Run**. If a security warning appears, click **Run**.
4. When the ReWaRD Setup welcome screen appears, click **Next**.
5. Read and accept the License Agreement and click **Next**. Then review the Release Notes and click **Next**.
6. Select the features you want to install, choose a product install path, and click **Next**.
7. When you are ready to update your system, click **Next**. The ReWaRD Setup program will install the necessary files on your system.
8. When setup is complete, click **Finish**. The HASP Device Driver setup program will then start, allowing you to install the drivers necessary for ReWaRD to communicate with its security key. Follow the on-screen instructions.
9. When the HASP setup is complete, click **Finish**. If you ticked the **Run ReWaRD** button, ReWaRD will start automatically and display its Licence Registration Wizard.
10. Enter your user information exactly as given on the program's packaging, make sure the supplied security key is attached to your computer, and click **Register** to run ReWaRD.

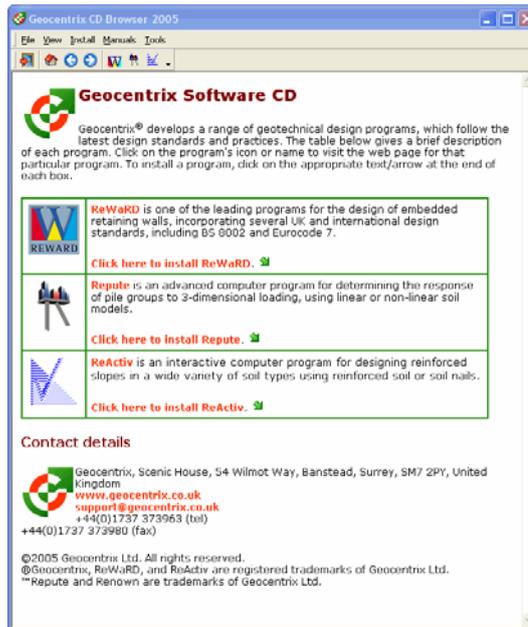

Geocentrix Ltd

Scenic House
54 Wilmot Way
Banstead
Surrey
SM7 2PY
United Kingdom

www.geocentrix.co.uk
mail@geocentrix.co.uk
Tel: +44 (0)1737 373963
Fax: +44 (0)1737 373980



Managing Director
Andrew Bond
MA MSc PhD DIC MICE CEng
andrew.bond@
geocentrix.co.uk

Registered office
as above

Registered in England
No. 3738829

VAT Registration No
GB 709 3785 07

Geocentrix is a registered
trademark of Geocentrix Ltd

To learn how to use the program, we suggest you follow Tutorials 1-3 in the program's *User Manual* (available in Adobe PDF format from **Start > All Programs > Geocentrix > User Manuals > ReWaRD 2.5 User Manual**).